


**VW 003**

<b>Ref: VW-3</b>	<b>3 Pads, 8 Scallop Cooling Shroud</b>		
<b>VW12</b>	<b>1968-76</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 10"	130 T Ring Gear	
Mounting: 3 Pads	Pilot Dia: .825"		

<b>Ref: VW-2</b>	<b>3 Pads, 24 Scallop Cooling Shroud</b>		
<b>VW11</b>	<b>1968-76</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 10"	130 T Ring Gear	
Mounting: 3 Pads	Pilot Dia: .825"		

<b>Ref: VW-1</b>	<b>4 Pads, .825" Pilot</b>		
<b>VW10</b>	<b>1968-76 Automatic, Stick Shift</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 24	
	Bolt Circle: 10"	130 T Ring Gear	
Mounting: 4 Pads	Pilot Dia: .825"		

<b>Ref: N/A</b>	<b>4 Pads, .932" Pilot</b>		
<b>VW9</b>	<b>1968-76 Porsche</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 24	
	Bolt Circle: 10"	130 T Ring Gear	
Mounting: 4 Pads	Pilot Dia: .932"		


**VW 010, 087, 089, 090**


<b>Ref: VW-4</b>	<b>3 Pads (Low Stall) (.750" Hub Height)</b>		
<b>VW13</b>	<b>76-Up Audi 100LS, 4000, 5000, Quattro, &amp; Porsche Codes: K</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 10"	Appr Stall: 2100-2300	
Mounting: 3 Pads	Pilot Dia: .825"		

<b>Ref: VW-4HS</b>	<b>3 Pads (High Stall) (.580" Hub Height)</b>		
<b>VW14</b>	<b>76-Up Audi 100LS, 4000, 5000, Quattro, &amp; Porsche Codes: G, Q</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 10"	Appr Stall: 3000-3200	
Mounting: 3 Pads	Pilot Dia: .825"		


Volkswagen 003, 010, 087-090


VW 010, 087, 089, 090 (cont.)

Ref: VW-2	<b>3 Pads, w/ Ring Gear</b>		
<b>VW11</b>	<b>1976-Up Vanagon (090)</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 10"	130 T Ring Gear	
	Mounting: 3 Pads	Pilot Dia: .825"	

Ref: AU-2	<b>3 Pads, 9.75" Bolt Circle (.567" Hub Height)</b>		
<b>AU2</b>	<b>1988-Up Audi 80, 90 9.75" Bolt Circle      Codes: Y</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 9.75"	<b>.567" Hub Height</b>	
	Mounting: 3 Pads	Pilot Dia: .825"	

Ref: AU-1	<b>3 Pads, 10" Bolt Circle (.450" Hub Height)</b>		
<b>VW4</b>	<b>1976-Up Audi 5000 (087) 10" Bolt Circle</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 10"	<b>.450" Hub Height</b>	
	Mounting: 3 Pads	Pilot Dia: .825"	

Ref: VW-6	<b>4 Pads, 8.625" Bolt Circle</b>		
<b>VW16</b>	<b>1981-Up Audi 5000 (087)</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 8.75"	No Ring Gear	
	Mounting: 4 Pads	Pilot Dia: .825"	

Ref: VW-5	<b>4 Pads, 9.875" Bolt Circle</b>		
<b>VW15</b>	<b>1984-Up Audi 5000S (087) Codes: N, W</b>		
	Type: Non Lock Up	Hub: Bushing	
	Diameter: 10.5"	Input Splines: 26	
	Bolt Circle: 9.875"	No Ring Gear	
	Mounting: 4 Pads	Pilot Dia: .825"	


Volkswagen 010, 087, 089, 090

VW 095, 096, 097, AG4


TO ID VW17,  
VW20, VW21



VW17 (3 Sets of Splines)

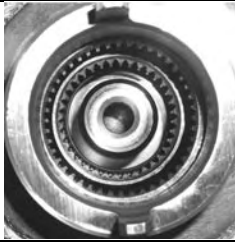

VW20 (2 Sets of Splines, Hollow Center Stud)

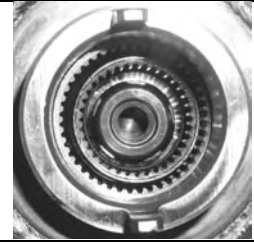

VW21 (2 Sets of Splines, w/sleeve bearing)

Ref: RE-9	<b>No Ring Gear</b>			
VW18	<b>1990-Up VW Passat</b>			
	Type: Lock Up	Hub: Ears		
	Diameter: 10.5"	Input Splines: 36		
	Bolt Circle: 9.25"	10 mm x 1.25 Threads		
	Mounting: 3 Studs	Pilot Dia: .630" to .825"		

Ref: VW-10	<b>3 Sets of Splines</b>			
VW17	<b>1990-94 VW Passat, Corrado G-60</b>			
	<b>Codes: QACA</b>			
	Type: Lock Up	Hub: Ears		
	Diameter: 10.5"	Input Splines: 36		
	Bolt Circle: 9.25"	10 mm x 1.25 Threads		
	Mounting: 3 Studs	Pilot Dia: .630" to .825"		

Ref: RE-10	<b>2 Sets of Splines, Hollow Center Stud</b>			
VW20	<b>1995-E97 VW Passat, Jetta</b>			
	<b>Codes: QADB, QADC, QBDC, QBDD</b>			
	<b>QCDR, QCDV</b>			
	Type: Lock Up	Hub: Ears		
	Diameter: 10.5"	Input Splines: 36		
	Bolt Circle: 9.25"	10 mm x 1.25 Threads		
	Mounting: 3 Studs	Pilot Dia: .630" to .825"		

Ref: RE-10B	<b>2 Sets of Splines w/ Sleeve Bearing</b>			
VW21	<b>L1997-Up VW</b>			
	<b>Codes: QCDD</b>			
	Type: Lock Up	Hub: Ears		
	Diameter: 10.5"	Input Splines: 36		
	Bolt Circle: 9.25"	10 mm x 1.00 Threads		
	Mounting: 3 Studs	Pilot Dia: .630" to .825"		

Volkswagen 095, 096, 097